FloMAX
Diesel Fuel Nozzles

DIXON
The Right Connection®

Operation of FloMAX DEF System

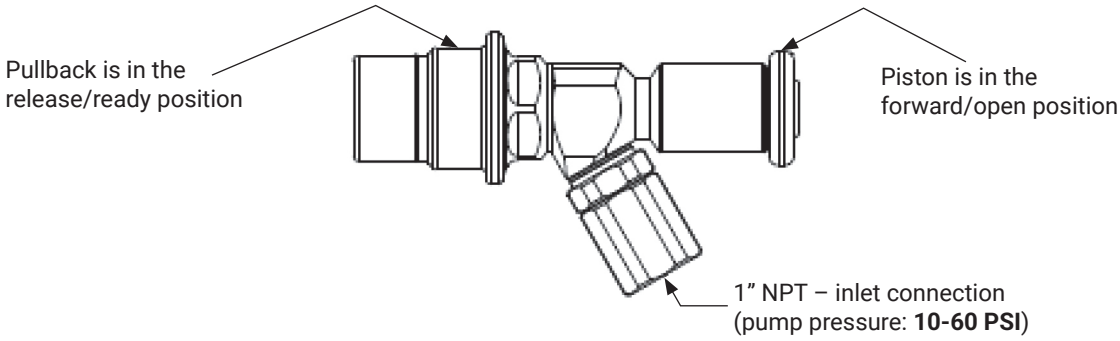

1. Connect inlet hose and turn pump on

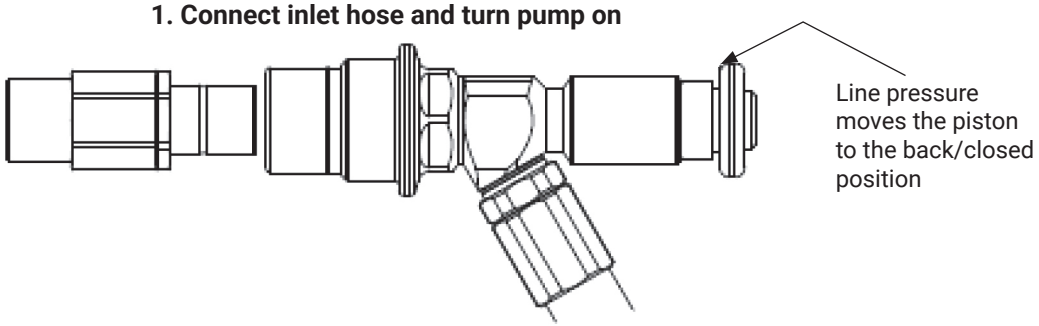

2. Push to connect nozzle on to receiver

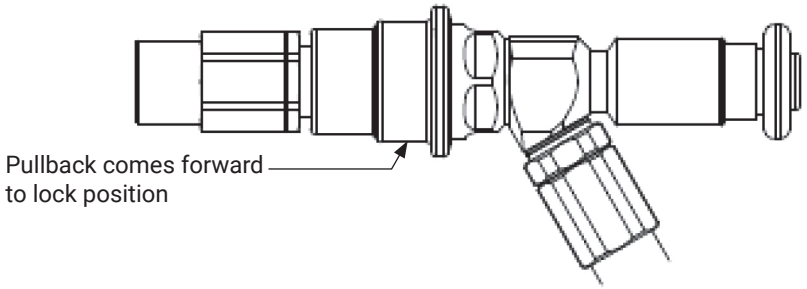

3. Start DEF fluid transfer

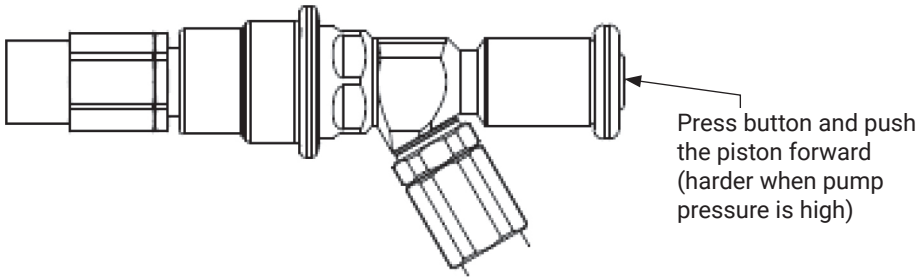

Nozzle piston automatically moves to the off position when the tank is full.
Pull on the pullback to release the nozzle.
DEF nozzle is returned to stage 1. and ready for the next use.

Dixon
1 Dixon Sq., Chestertown, MD 21620
ph: 877.963.4966 • fx: 800.283.4966
dixonvalve.com

© 2026 DVCC

• Uncommon Excellence • Uncommon Excellence • Uncommon Excellence • Uncommon Excellence • Uncommon Excellence • Uncommon Excellence • Uncommon Excellence • Uncommon