




C2

Jack-type Tool

For applying $\frac{3}{8}$ " and $\frac{5}{8}$ " width clamps

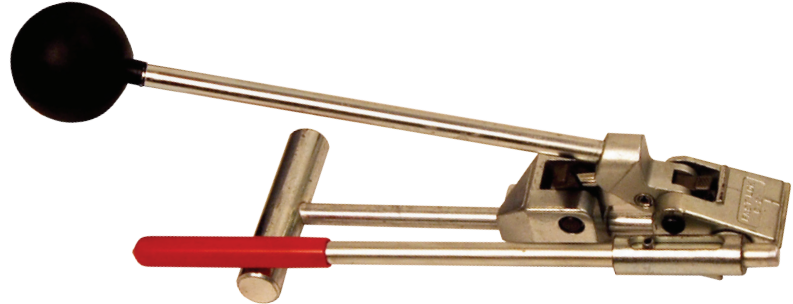

Operating Instructions for the C2 Installation Tool

1

Pull strapping from carton and cut off. Slide clamp on strap and bend end under at ear side of clamp. Bring opposite end of strap around object twice, each time passing under clamp bridge.

2

Raise ball handle to forward position and insert strapping. Slide tool forward.

3

Slide cutter handle forward for alignment. Jack ball handle to reach desired tension.

4

Retract cutter handle and raise to 90-110°. To cut strapping, rotate cutter handle. Increase locking bend by rotating tool forward. Apply thumb pressure on tab as you remove tool. Bend ears with hammer.



Part Identification for the C2 Installation Tool

Illustrations are not in correct proportion to one another.

For applying 3/8" and 5/8" band clamps

Qty Per Tool	Part Description	Part #
1	Holding dog	C207
2	Puller links	FXA211
2	Puller links	FXB211
1	Puller link pin	C212
1	Pulling dog	FX214
1	Pulling dog spring	FY217
1	Pulling dog pin	F233
1	Ball handle assembly	FA220
1	Pusher puller assembly	CA231
3	Retaining rings	F242
1	Cutter	EXP201
1	Crescent ring	F232
1	Cutter handle	C200
1	Holding dog pin	F233
2	3/16" x 5/8" roll pin	C236



Sliding Jack Replacement Kit

Feature:

- fits the F100, F175 and C2 tools

Part #
FY205K



The Right Connection®

Dixon

800 High Street
 Chestertown, MD 21620
 877.963.4966
 Fax: 800.283.4966
dixonvalve.com